

# Quick Installation Guide ENR-1000 Series



#### 01 BEFORE YOU START

Thank you for purchasing ACTi ENR Standalone Network Video Recorder. This guide contains all the information you need to quickly setup ACTi ENR server system via local display interface. For detailed instructions on installation, operations or how to use a web client, please refer to User's Manual on ACTi corporate website.

The prerequisites below are necessary before installation:

- Monitor (1080p, HDMI input) with HDMI cable
- USB mouse
- At least one certified 3.5-inch SATA hard disk. Please always use the hard disks ACTi tested to be compatible with ENR-1000 series.
   You may find the certified models in this document <u>ACTi Certified</u> <u>HDD List for Standalone Network Video Recorders</u> available via this web link: <a href="http://www.acti.com/hdd">http://www.acti.com/hdd</a>

If you have any problem during system installation, please contact our engineers via <a href="http://www.acti.com/CHD">http://www.acti.com/CHD</a> or US/Canada toll-free number: 1-866-410-2284 (ACTi)

#### 02 UNPACK

Your package includes the following items:



ACTI ENR X 1



Quick Installation Guide X 1



Adapter Converter Set X 1




**USB Mouse X1** 



Hard Disk Screws X8



Power Adapter X 1

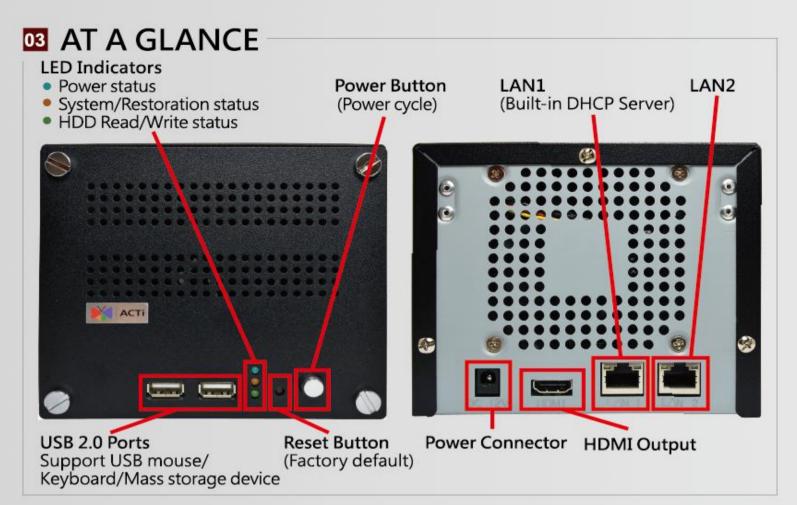

### HARD DISK INSTALLATION

#### Step 1 Remove the front panel screws, and then remove the back panel screws.

 


Step 2 Slide the case backward until it stops, and then lift it up to remove.





Step 3
Insert Disk 2 in the lower bay, connect SATA power






Step 4
Make sure you connect the correct data cable to the corresponding disk.



#### 05 HARD DISK INSTALLATION

## Step 5 Lock Disk 2 using the disk screws in this sequence: A->B->C->D



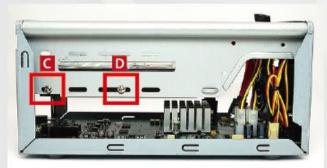


Repeat Step3~Step5 to install Disk 1 to the upper bay.



Step 7
Install the case in reverse order of removal step (see Step 2), slide the case cover back until it clicks. Lock the back panel with its screws. Do the same with the front panel.



#### OF CONNECTIONS

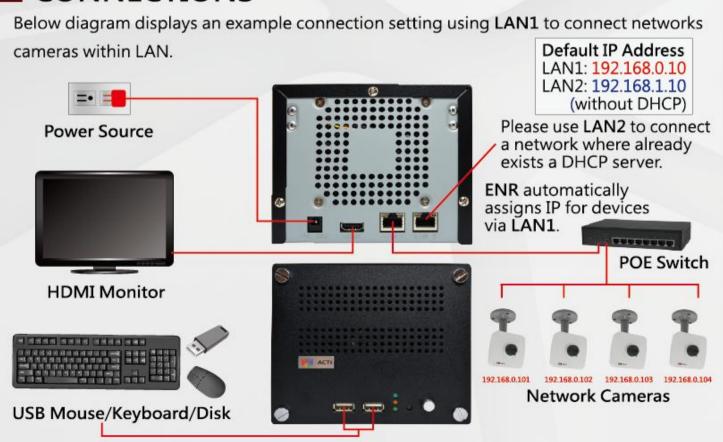

#### 07 STARTUP

- 1. Plug the power adapter into ENR and electricity outlet.
- 2. Connect the HDMI monitor.
- 3. Connect the USB mouse.
- 4. Press down Power Button. The power status LED will turn solid blue.
- 5. Attach the network cables to ENR LAN ports
- 6. Connect the network cameras to POE switch.

#### LOGIN



On Login window, input Account and Password with virtual keypad, and then click "Login".

Account : admin

Password: 123456



#### FORMAT DISKS



On HDD setup wizard window, select the unformatted disk and click "Format". Repeat this step to format the other disk, and then click "OK".

#### ADD CAMERAS



On camera setup wizard window, click "Auto Add", input the Username and Password to access the cameras, and they will be added to the system.

#### 11 CHECK LIVE VIEW



After the cameras are added, you will immediately see live streams on Live View screen.

- To take a snapshot, select the channel and then click
- To view a single channel in 1x1 layout, double-click on the channel.



To validate PTZ operations:

- (1) Select a PTZ camera channel.
- (2) Click PTZ in the bottom left corner to open PTZ panel, and use the on-screen buttons to manipulate the camera.

The number of maximum supported live view channels will vary by ENR models.

#### 12 CHECK RECORDINGS



On Live View screen, click Playback in the bottom right corner to entert Playback screen.



On the time bar, drag the current-time indicator to your desired position, and click

on Playback control panel to play.

To export video, select the channel and then click